

## Drop Fixture Driver Chart

Drop Narrow									
<b>Height</b>	4	4	4	6	6	6	8	8	8
<b>Output</b>	Low	Medium	High	Low	Medium	High	Low	Medium	High
<b>Driver</b>	Remote	Remote	Remote	Remote	Remote	Remote	Integral	Remote*	Integral
*Must Use remote Osram driver									

Drop Wide									
<b>Height</b>	4	4	4	6	6	6	8	8	8
<b>Output</b>	Low	Medium	High	Low	Medium	High	Low	Medium	High
<b>Driver</b>	Remote	Remote	Remote	Integral	Integral	Integral	Integral	Integral	Integral