

DATE

JOB NAME

TYPE

Features

Applications

- · Steel housing with white enamel finish
- Otoci floading with write charles inform
- Clean appearance, no exposed fasteners.
 Milk White Lens
- Office Areas
- Stairwells
- Corridors
- Class Rooms
- Hospitals
- Nursing Homes

Series	Size	LED System	Color Temp	Voltage	Mounting	Options
BPR LED	1x4					
		LTG1- Standard LTG2- Low LTG3- High C- Custom Package (Consult Factory)	3000K 3500K 4000K 5000K	120 277 UNV	SM -Surface Mount PS - Pendant Stem	EM-EM Pack* DB- Dimming SC-Separate Circuit WH- Whips

Ordering Example: BPR LED-1X4-LTG2-4000K-UNV-SM-DB

* Voltage must be specified with EM option

LED System Information

Options:

PACKAGE	SYSTEM WATTS	DELIVERED LUMENS
LTG1 (STANDARD)	29.5W	3525Lm
LTG2 (LOW)	27W	3150Lm
LTG3 (HIGH)	33W	3840Lm

Color Temperature

Pro-rate:

ССТ	OUTPUT
3000K	95%
3500K	97%
4000K	100%
5000K	103%

Details

Application Features: Specification grade, surface mounted luminaire with milk white lens. For use in indoor applications where a LED luminaire with maximum efficiency is required. Available in 1x4, 2x2 and 2x4 configurations.

Construction: Die formed and spot welded, heavy guage cold rolled steel housing. Diffuser held within hinged door frame, hinges from either side using steel pin hinges and is held in closed position by two positive cam latches. Ballast accessed through tool-less ballast cover. Sufficient knock-outs provided for optional pendant stems.

Electrical: Integral driver.

Approvals: Union made, ETL listed, and manufactured in the US.

Mounting: Surface mounts over electrical junction box or with optional

pendant stems.

Optics: Milk White Lens

Options: Emergency Battery Backup, Dimming, and 6' Whips.


September 2014

Coronet Inc. | Phone: 973-345-7660 | Fax: 973-345-8705 | www.coronetled.com

BPR LED 1x4

^{***}FOR ANY CUSTOM LED PACKAGE REQUESTS CONSULT FACTORY

TOP VIEW

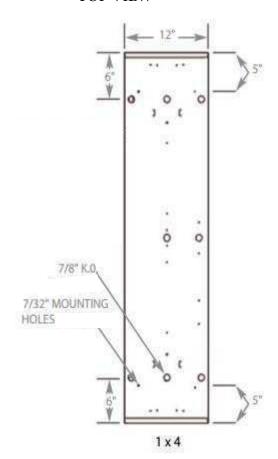


CROSS SECTION





Photometrics:

BPR LED-2X2-LTG3-4000K:

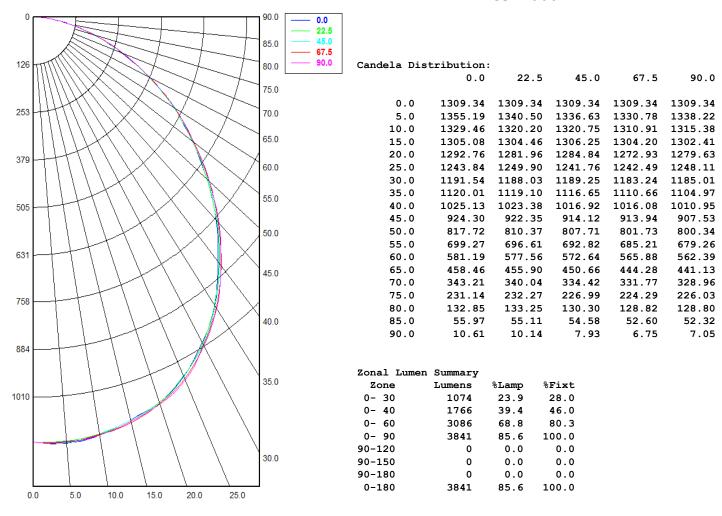

Total Luminaire Optical Efficiency = 85.3%

Coefficients of Ottilization - Zonar Cavity Method																		
pfc = 0.20																		
pcc-	->		. 8				. 7			. 5			. 3			. 0		0
pw-	> .7	. 5	. 3	. 0	. 7	. 5	. 3	.0	. 5	. 3	.0	. 5	. 3	.0	. 5	. 3	. 0	0
RCR																		
0	102	102	102	102	100	100	100	100	95	95	95	91	91	91	88	88	88	86
1	94	90	86	81	91	88	84	80	84	81	78	81	78	75	73	73	73	72
2	85	78	72	65	83	77	71	65	74	69	64	71	67	62	61	61	61	60
3	78	69	62	54	76	67	61	54	65	59	53	62	58	52	51	51	51	51
4	71	61	53	45	69	60	53	45	58	52	45	56	50	44	44	44	44	44
5	65	54	47	39	64	54	46	39	52	45	38	50	44	38	38	38	38	38
6	60	49	41	34	59	48	41	34	47	40	33	45	40	33	33	33	33	33
7	56	44	37	30	55	44	37	30	42	36	29	41	35	29	29	29	29	29
8	52	41	33	26	51	40	33	26	39	33	26	38	32	26	26	26	26	26
9	49	37	30	24	48	37	30	24	36	30	24	35	29	23	23	23	23	23
10	46	34	28	21	45	34	27	21	33	27	21	32	27	21	21	21	21	21

Coefficients of Utilization - Zonal Cavity Method